




www.MacTops.com


## Mac's Upholstery Butt Buffer Installation Instructions




1. Place Butt Buffer bottom face up

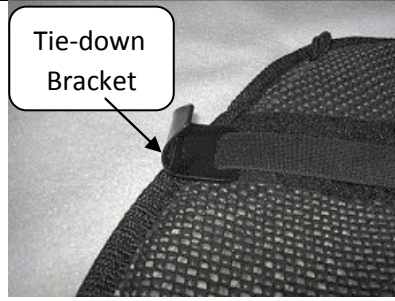

2. If your Butt Buffer came with the metal seat tie-down brackets, we suggest these be removed for safety or damage they may possibly cause if they were to come lose.

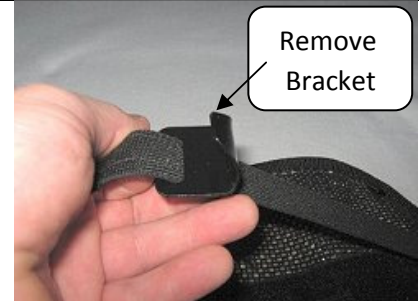


3. Slide the seat tie-down brackets off the Velcro strips and discard.

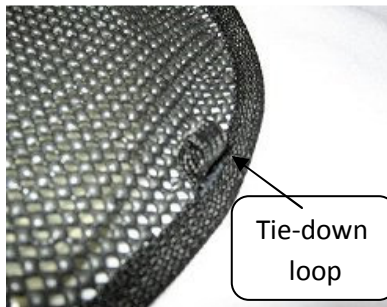

4. Locate the four seat tie-down loops.



5. Use a shoe string or set, too fasten the Butt Buffer securely to the bottom of the motorcycle seat.

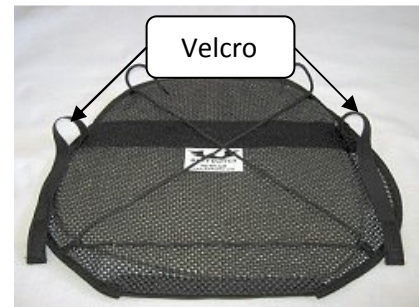

6. Use the Velcro straps too take up the slack of the strings.

These instructions are not approved by the Butt Buffer company. These instructions provide a guide only. Mac's Upholstery takes no responsibility for damage caused by poor installation. The instructions provided, are the installation procedures we use at Mac's Upholstery.

**Mac's Upholstery**  
5015 15<sup>th</sup> Avenue NW  
Seattle, WA 98107  
206-783-1696  
www.MacTops.com